


REFERENCE NO.	4894223228381 4894223228411 4894223228398 4894223228404	BLANC/WHITE IMITATION CHENE FONCE/ DARK SONOMA BLANC+ BETON/WHITE+BETON IMITATION CHENE/ SONOMA OAK
NOM DU PRODUIT	POYANG 3 ETAGERE 3CASES	
EAN:	4894223228381 4894223228411 4894223228398 4894223228404	BLANC/WHITE IMITATION CHENE FONCE/ DARK SONOMA BLANC+ BETON/WHITE+BETON IMITATION CHENE/ SONOMA OAK

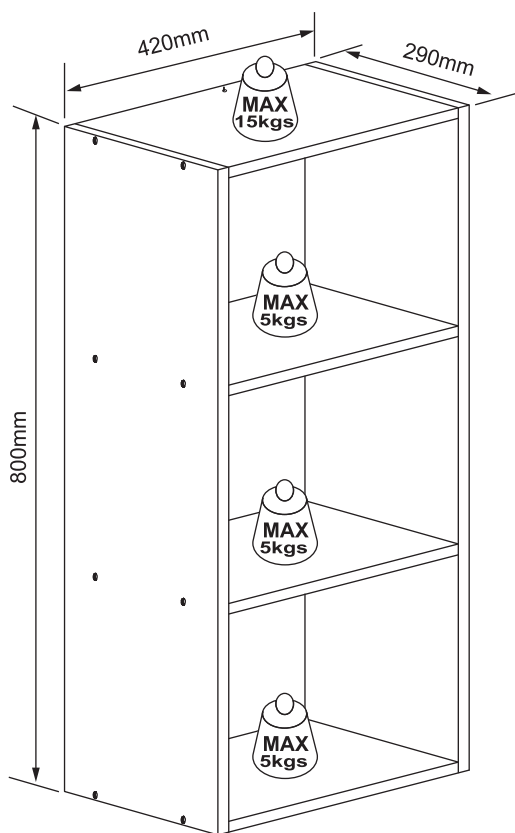

Séparez les éléments avant de trier



FR
Pensez à
donner ou recycler.

Association

ou
Magasin

ou
Déchèterie

<https://quefairedemesdechets.fr>



FR

1. Repérez les différentes pièces nécessaires à l'assemblage de votre meuble.
2. Regroupez et comptez les pièces de quincaillerie.
3. Munissez-vous de l'outillage nécessaire à l'assemblage de votre meuble.
4. Aménagez-vous un espace propice à l'assemblage; moquette et couverture peuvent protéger votre meuble des rayures.
5. Procédez au montage sans forcer. Il est recommandé de resserrer les vis au fil de l'utilisation.
6. Après assemblage de ce produit, il est conseillé d'aérer régulièrement la pièce pendant quelques jours.


CONSERVEZ VOTRE NOTICE DE MONTAGE. SI UNE PIÈCE VENAIT À MANQUER, L'INFORMATION RELATIVE À CELLE-CI FOURNIE PAR LA NOTICE DE MONTAGE RESTE LE MOYEN LE PLUS EFFICACE DE COMMUNIQUER AVEC VOTRE MAGASIN.



EN

1. Identify the parts which make up your piece of furniture.
2. Gather the hardware parts and count them.
3. Have the necessary assembly tools ready.
4. Organize a space for assembly, wall carpeting or a blanket will protect the furniture against scratches.
5. Never force the assembling while you put the parts together. You are recommended to tighten the screws after the furniture has been used for some time.
6. After assembling this product, it is advisable to regularly ventilate the room for a few days.

KEEP THE ASSEMBLY INSTRUCTION. THE RELEVANT INFORMATION YOU CAN FIND ON IT WILL HELP YOU GET IN TOUCH WITH YOUR STORE IF A PART WAS TO BE MISSING.

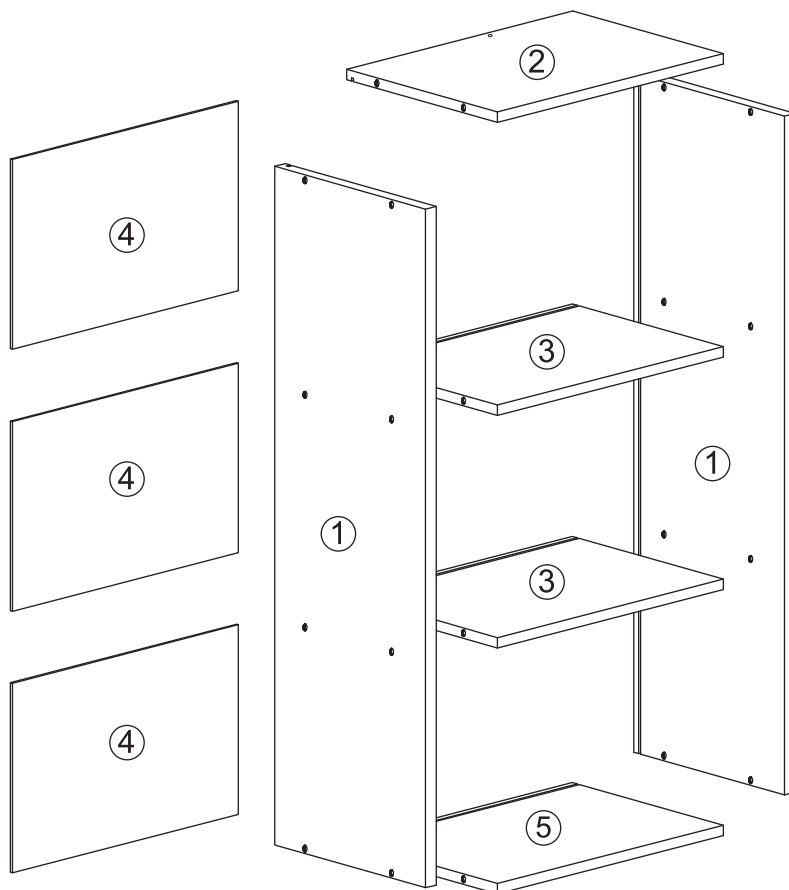

No.	Taille	Qté	Ctn no.
No.	Size	Qty	Ctn no.
No.	Tamaño	Cant	Ctn no.
Nr.	Maße	Anzahl	Ktn nr.
1	800x290x12mm	2	1
2	395x289x12mm	1	1
3	395x289x12mm	2	1
4	406x256x2.5mm	3	1
5	395x289x12mm	1	1

No.	Taille	Qté	Ctn no.
No.	Size	Qty	Ctn no.
No.	Tamaño	Cant	Ctn no.
Nr.	Maße	Anzahl	Ktn nr.


No.	Taille	Qté	Ctn no.
No.	Size	Qty	Ctn no.
No.	Tamaño	Cant	Ctn no.
Nr.	Maße	Anzahl	Ktn nr.

Quincailleries/Hardware/Herrajes/ Montageteile- Ctn no./Kto. nr.	1
--	---

A	x 16
	
M4 X 40mm	

B	x 1
	
M4 X 12 mm	

C	x 16
	
Ø12mm	

D	x 1
	
(66*31) *15*1.5mm	


F	x 4
	
Ø 16x3mm	



TEMPS DE MONTAGE: 15 MINUTES
SET-UP TIME: 15 MINUTES



OUTILLAGE:
TOOLS:




NOMBRE DE PERSONNES: 01
NUMBER OF PERSONS: 01




POUR L'ENTRETIEN, UN CHIFFON DOUX SUFFIRA.
A SOFT CLOTH IS SUITABLE FOR PRODUCT CARE.

SAV / Spare parts				EAN:2099901470867			
(No./Nr) x (Qté/Qty)							
Ax16		Cx16		Fx4			
Bx1		Dx1					


1

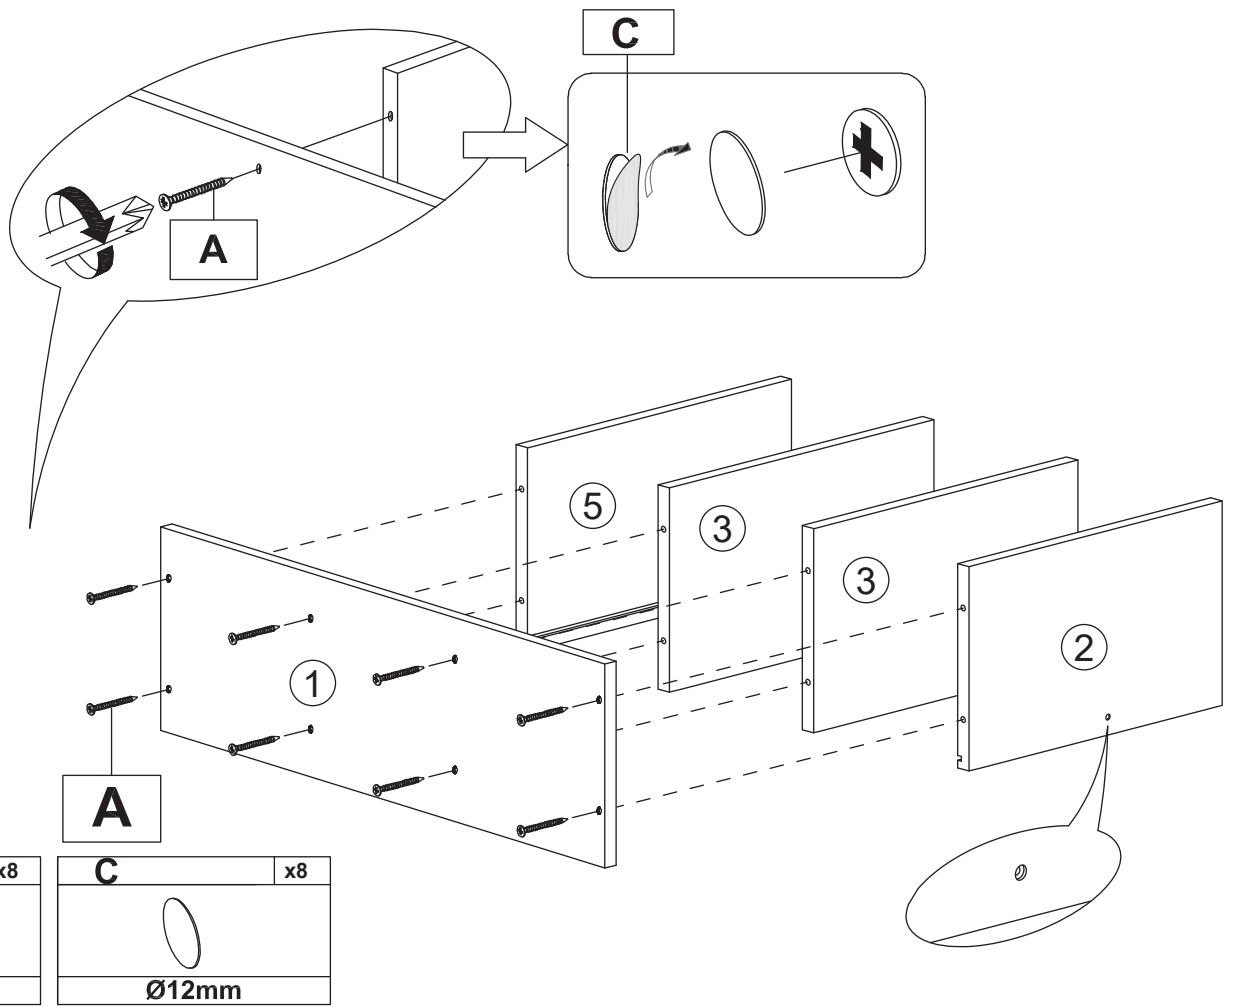

2

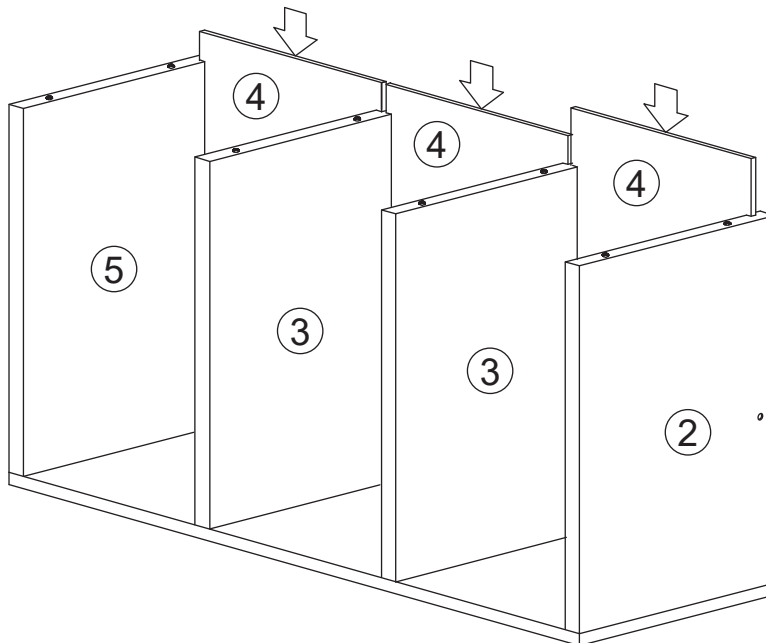


3

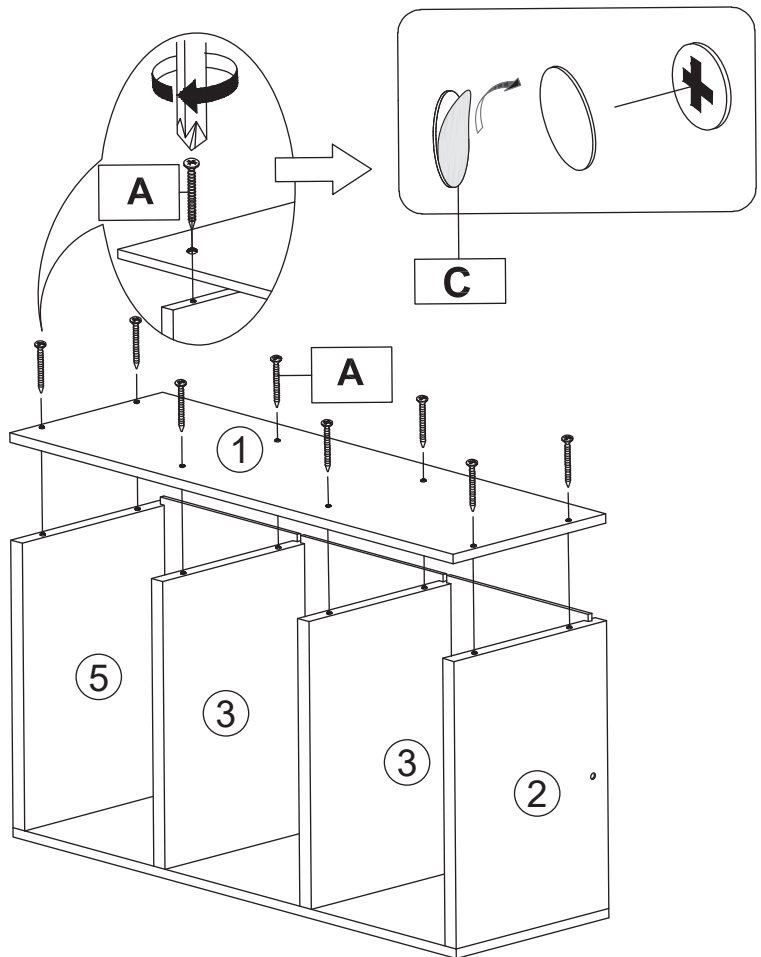

A	x8
	
M4x40 mm	



C	x8
	
Ø12mm	

4

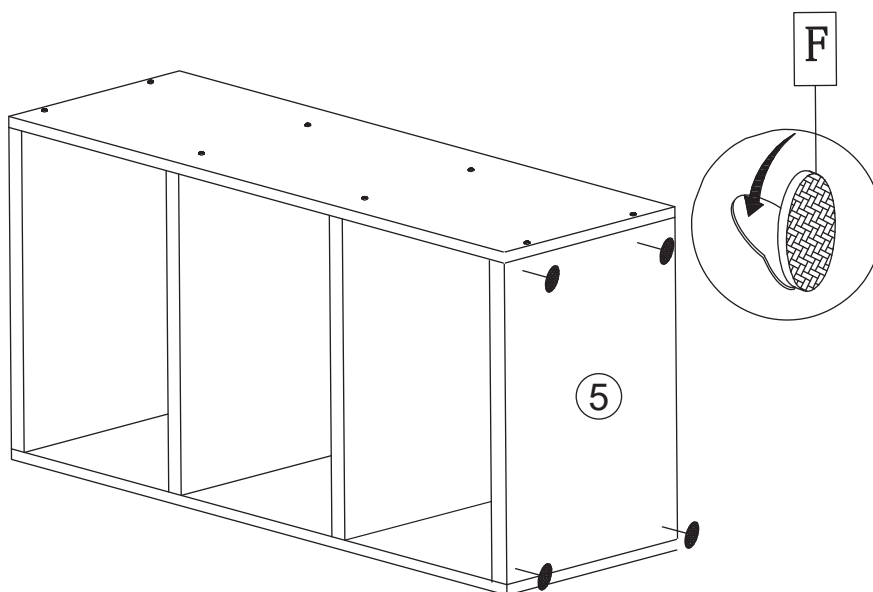

F	x 4
	
Ø 16x3mm	



5

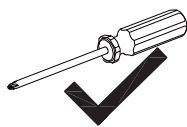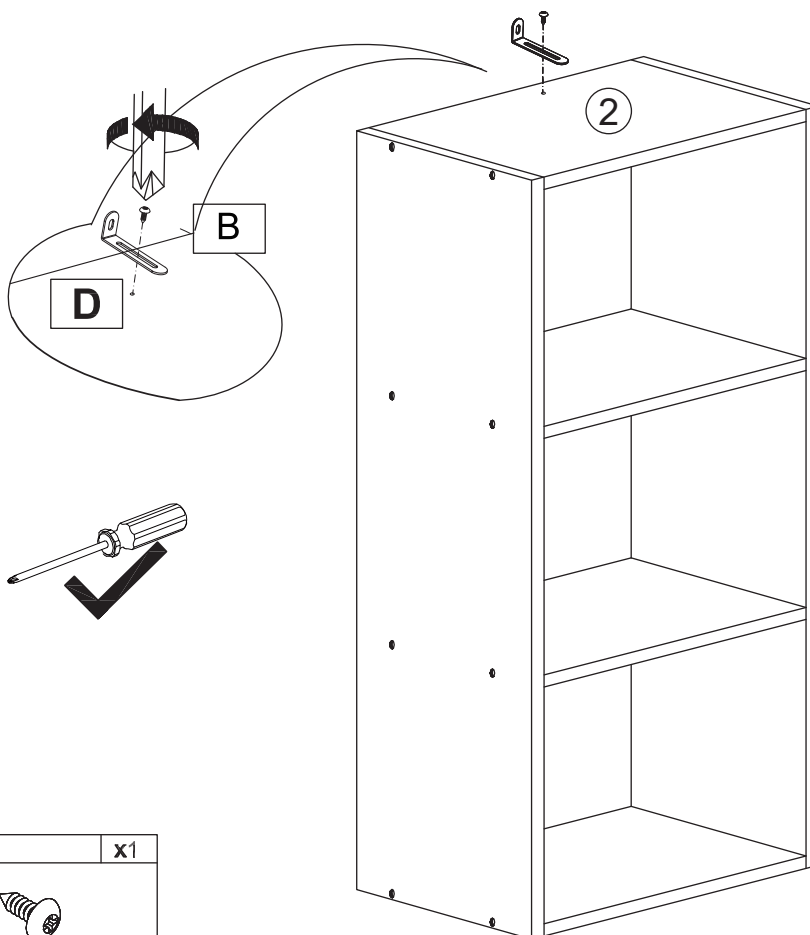

D	x1
	
(66*31) *15*1.5mm	

B	x1
	
M4 X12 mm	

6

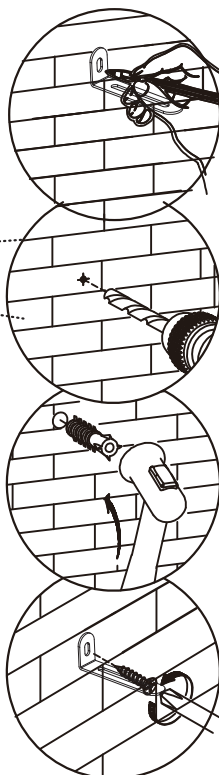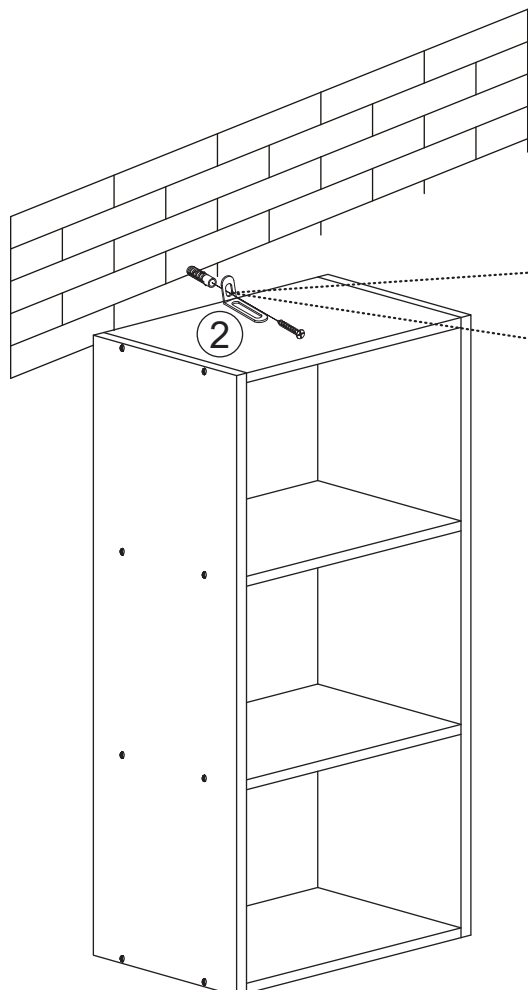

IMPORTANT : Pour éviter le basculement accidentel du meuble, la fixation du meuble au mur est obligatoire.

IMPORTANT: To prevent the furniture accidentally tipping over, it must be affixed to the wall.

La visserie nécessaire pour la jonction mur/meuble, dépendante de la nature du mur, n'est pas fournie. Adapter la quincaillerie à votre support. En cas de doute, consulter un spécialiste.

The screws required for the wall/ furniture junction, which depend on the type of wall, are not supplied. Ensure that the hardware is suited to your substrate. If in do

	x 1
	
non inclus	

	x 1
	
non inclus	

Les meubles contenant des panneaux à base de bois peuvent émettre des substances polluantes dans l'air intérieur. Il est donc recommandé, après l'installation du meuble, d'aérer fréquemment la pièce pendant au moins quatre semaines.

Furniture containing wood-based panels (particleboard, fibreboard, plywood, etc.) can emit pollutants into the indoor air. You are therefore advised, after the furniture has been installed in its location, to ventilate the room frequently for at least four weeks in order to reduce exposure to the pollutants emitted by the furniture.

