




NOTICE DE MONTAGE / ASSEMBLY INSTRUCTIONS

BUT International, 1 avenue Spinoza, 77 184 EMERAINVILLE

REFERENCE NO.	4894223229975 4894223229982 4894223229999	IMITATION CHENE/ SONOMA OAK BLANC/WHITE NOIR/BLACK
NOM DU PRODUIT.	KADOMI 2 SEPARATION	
EAN:	4894223229975 4894223229982 4894223229999	IMITATION CHENE/ SONOMA OAK BLANC/WHITE NOIR/BLACK

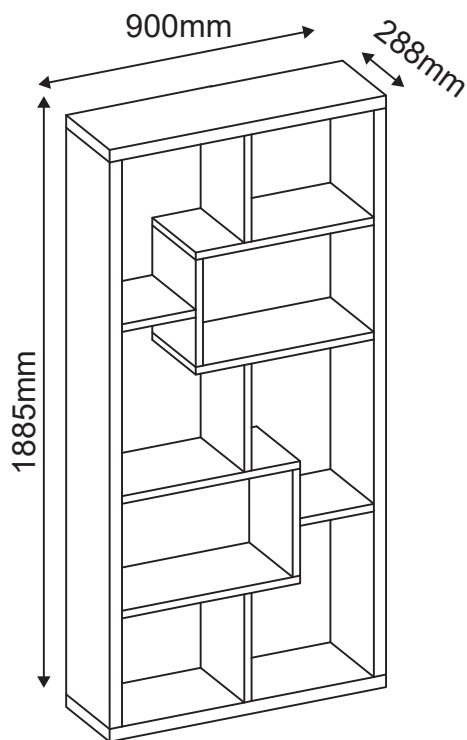

 Tous les papiers se trient et se recyclent




FR

1. Repérez les différentes pièces nécessaires à l'assemblage de votre meuble.
 2. Regroupez et comptez les pièces de quincaillerie.
 3. Munissez-vous de l'outillage nécessaire à l'assemblage de votre meuble.
 4. Aménagez-vous un espace propice à l'assemblage; moquette et couverture peuvent protéger votre meuble des rayures
 5. Procédez au montage sans forcer. Il est recommandé de resserrer les vis au fil de l'utilisation.
 6. Après assemblage de ce produit, il est conseillé d'aérer régulièrement la pièce pendant quelques jours.
- CONSERVEZ VOTRE NOTICE DE MONTAGE. SI UNE PIÈCE VENAIT À MANQUER, L'INFORMATION RELATIVE À CELLE-CI FOURNIE PAR LA NOTICE DE MONTAGE RESTE LE MOYEN LE PLUS EFFICACE DE COMMUNIQUER AVEC VOTRE MAGASIN.



EN

1. Identify the parts which make up your piece of furniture.
 2. Gather the hardware parts and count them.
 3. Have the necessary assembly tools ready.
 4. Organize a space for assembly, wall carpeting or a blanket will protect the furniture against scratches.
 5. Never force the assembling while you put the parts together. You are recommended to tighten the screws after the furniture has been used for some time.
 6. After assembling this product, it is advisable to regularly ventilate the room for a few days.
- KEEP THE ASSEMBLY INSTRUCTION. THE RELEVANT INFORMATION YOU CAN FIND ON IT WILL HELP YOU GET IN TOUCH WITH YOUR STORE IF A PART WAS TO BE MISSING.

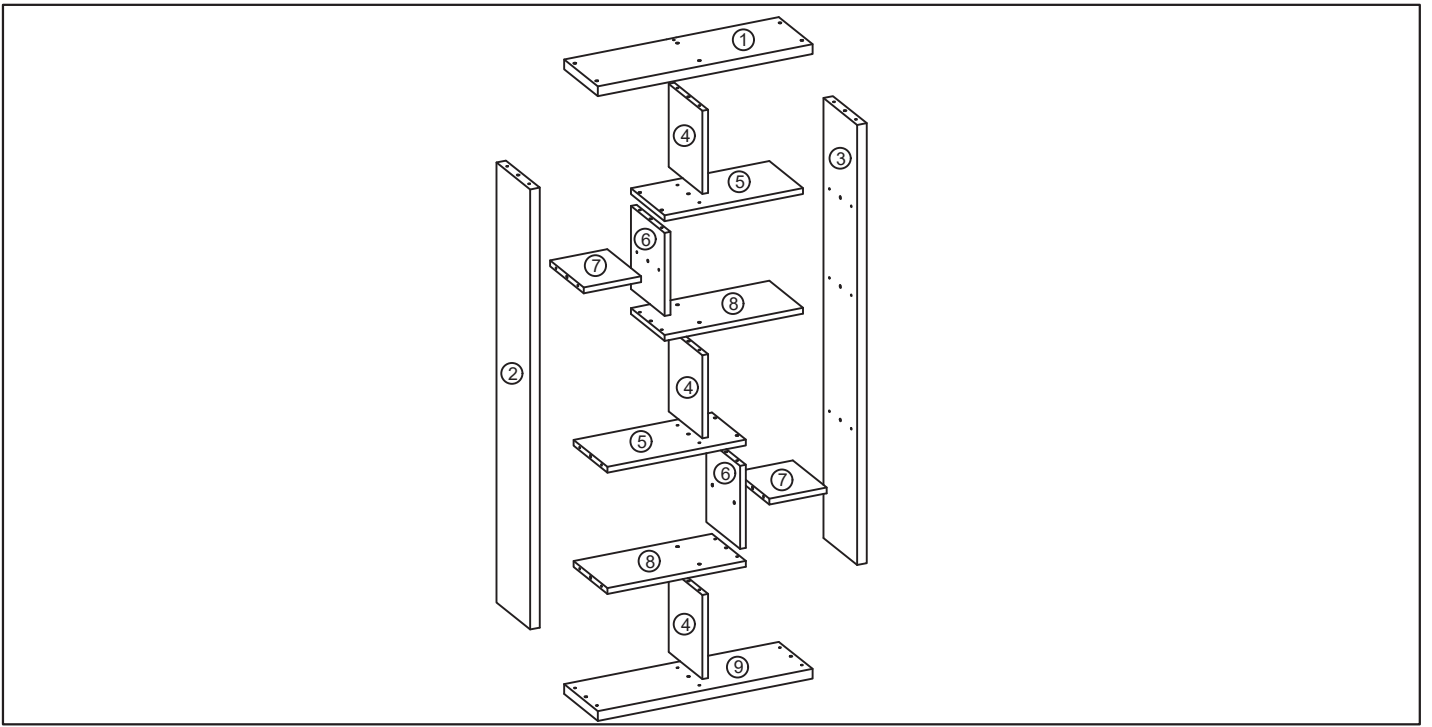

No.	Taille	Qté	Ctn no.
No.	Size	Qty	Ctn no.
No.	Tamaño	Cant	Ctn no.
1	900x285x40mm	x1	1/1
2	1805x285x40mm	x1	1/1
3	1805x285x40mm	x1	1/1
4	340x285x25mm	x3	1/1
5	580x285x25mm	x2	1/1

No.	Taille	Qté	Ctn no.
No.	Size	Qty	Ctn no.
No.	Tamaño	Cant	Ctn no.
6	340x285x25mm	x2	1/1
7	235x285x25mm	x2	1/1
8	580x285x25mm	x2	1/1
9	900x285x40mm	x1	1/1

Quincailleries/Hardware/Herrajes/ Montageteile- Ctn no./Kto.nr. 1

A	x1	B	x1	C	x12	D	x22	E	x20	F	x12	G	x12
66x15mm		∅4x14mm		∅6x35mm		∅10x40mm		∅7x35mm		∅15x9mm		∅7x65mm	
H	x1	I	x18	J	x4								
4mm		Dia20mm		Dia25mm									



TEMPS DE MONTAGE : 40 MINUTE
SET-UP TIME : 40 MINUTE



OUTILLAGE :
TOOLS:





NOMBRE DE PERSONNES : 02
NUMBER OF PERSONS : 02





POUR L'ENTRETIEN, UN CHIFFON DOUX SUFFIRA.
FOR GENERAL CARE, A PIECE OF CLOTH WILL BE ENOUGH

SAV / Spare Part s				EAN:			
(No. / Nr)x(Qté/Qty)							
Ax1		Ex20		Ix18			
Bx1		Fx12		Jx4			
Cx12		Gx12					
Dx22		Hx1					

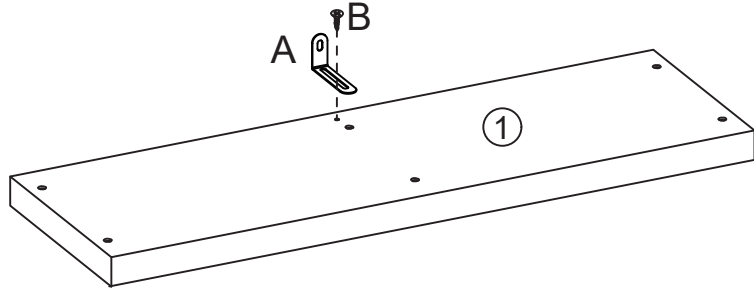
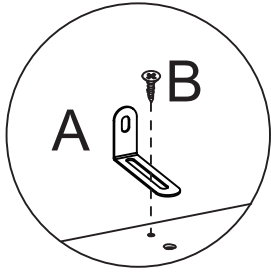
1




A	x1
	
66x15mm	


B	x1
	
∅4x14mm	

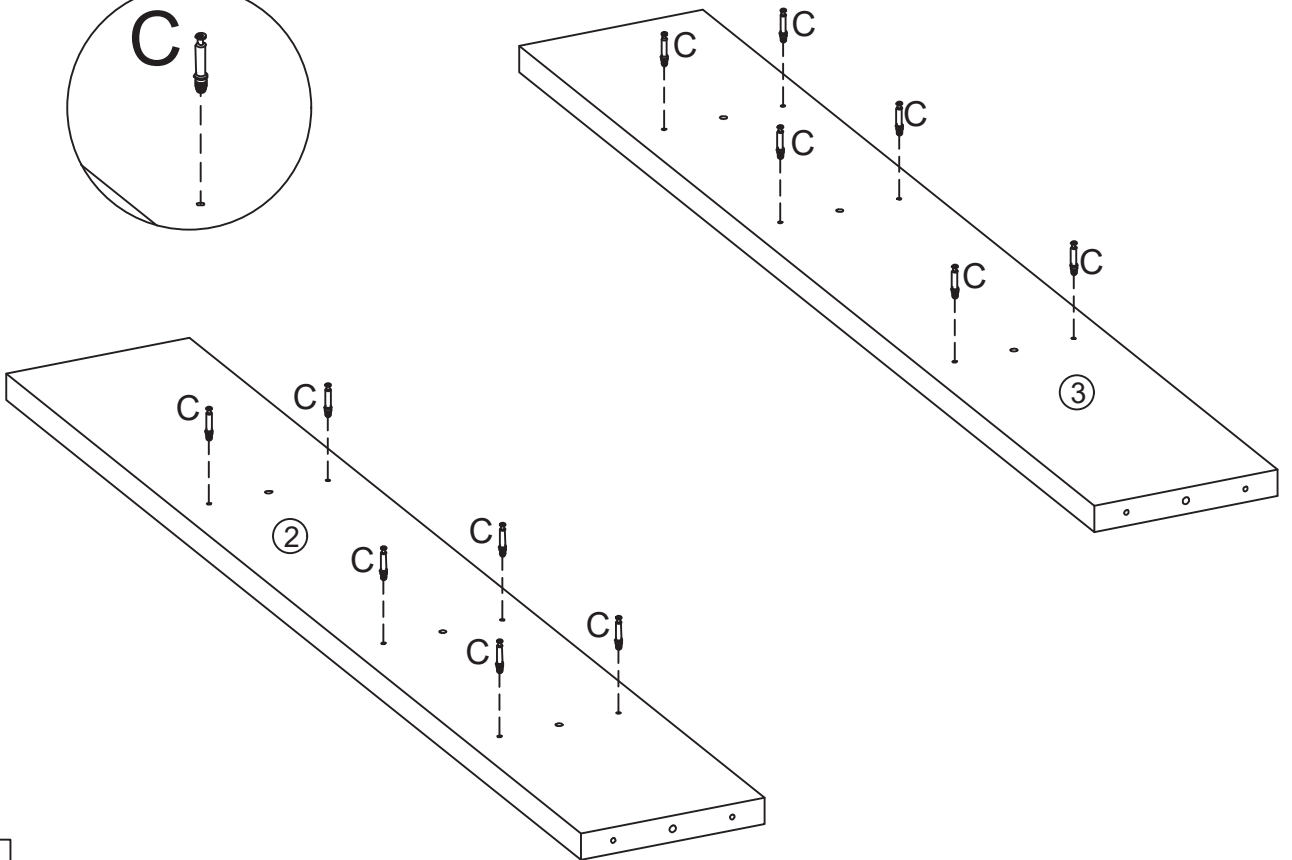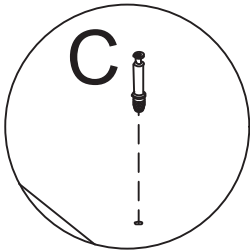


2




C	x12
	
∅6x35mm	

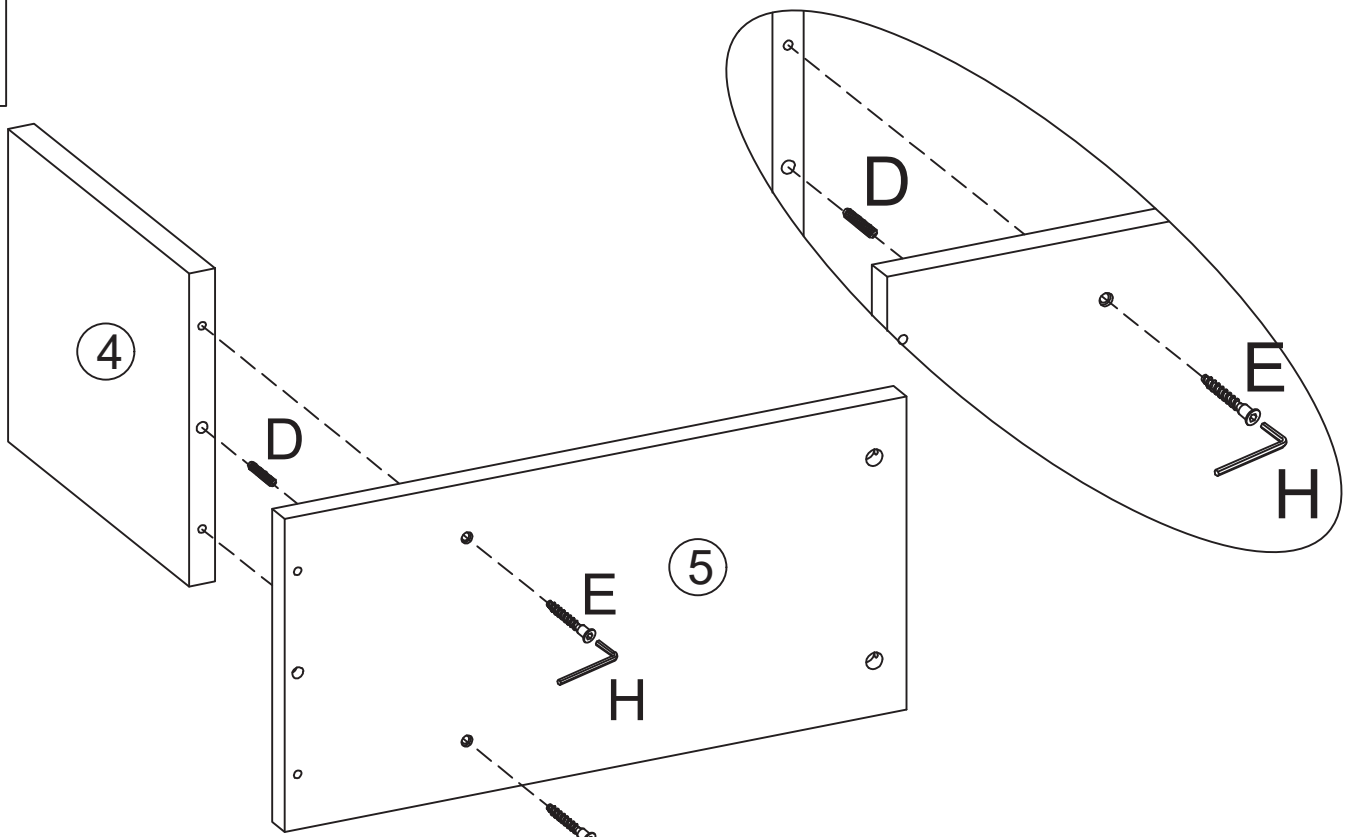


3




D	x1	E	x2	H	x1
					
∅ 10x40mm		∅ 7x35mm		4mm	

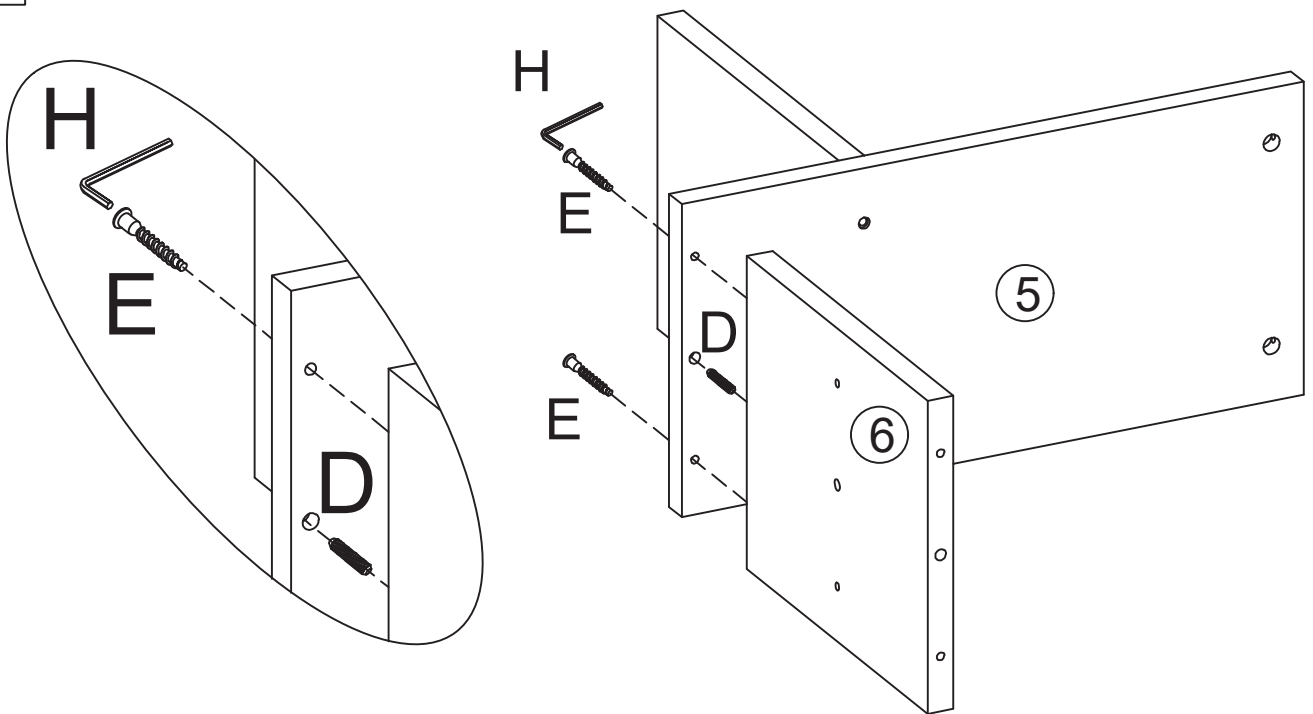


4




D	x1	E	x2	H	x1
					
∅ 10x40mm		∅ 7x35mm		4mm	

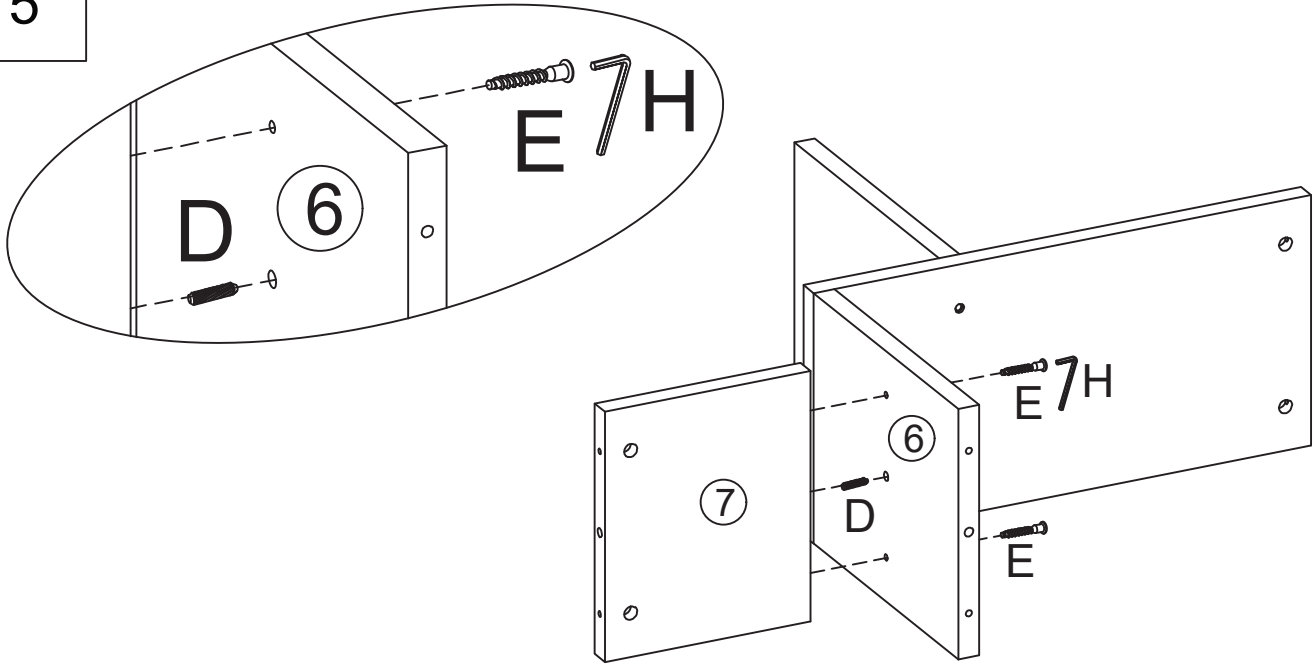


5




D	x1	E	x2	H	x1
					
∅ 10x40mm		∅ 7x35mm		4mm	

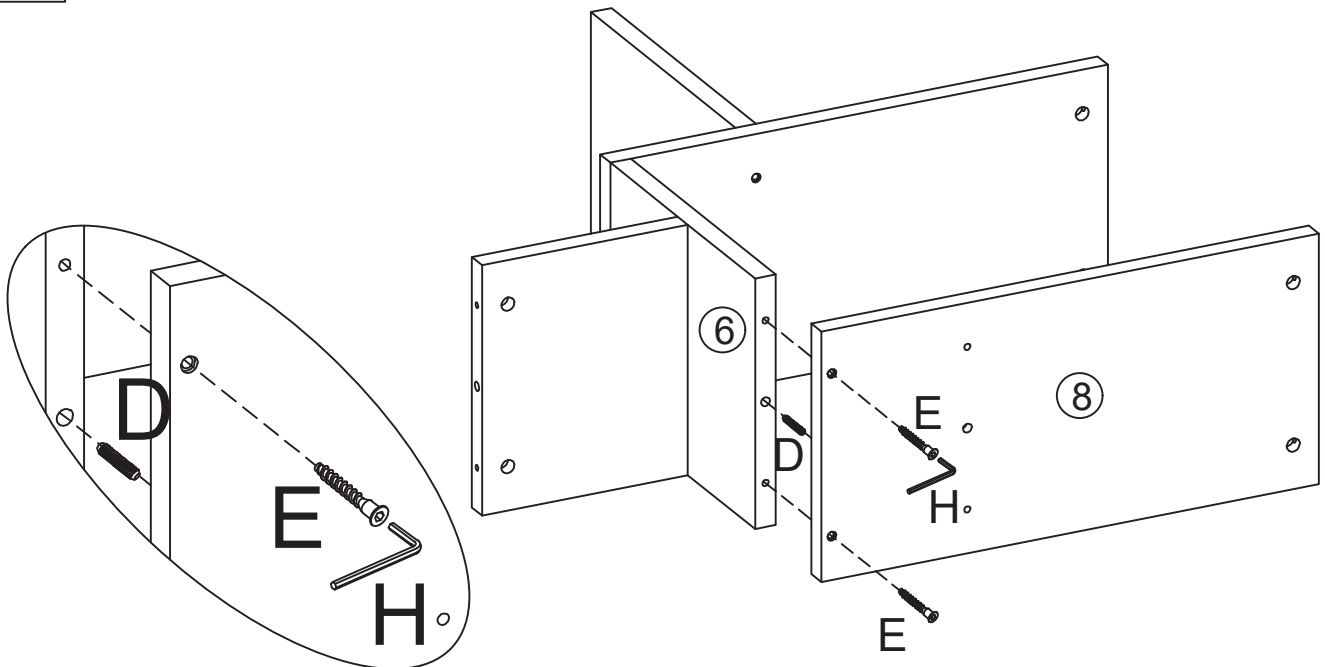


6




D	x1	E	x2	H	x1
					
∅ 10x40mm		∅ 7x35mm		4mm	

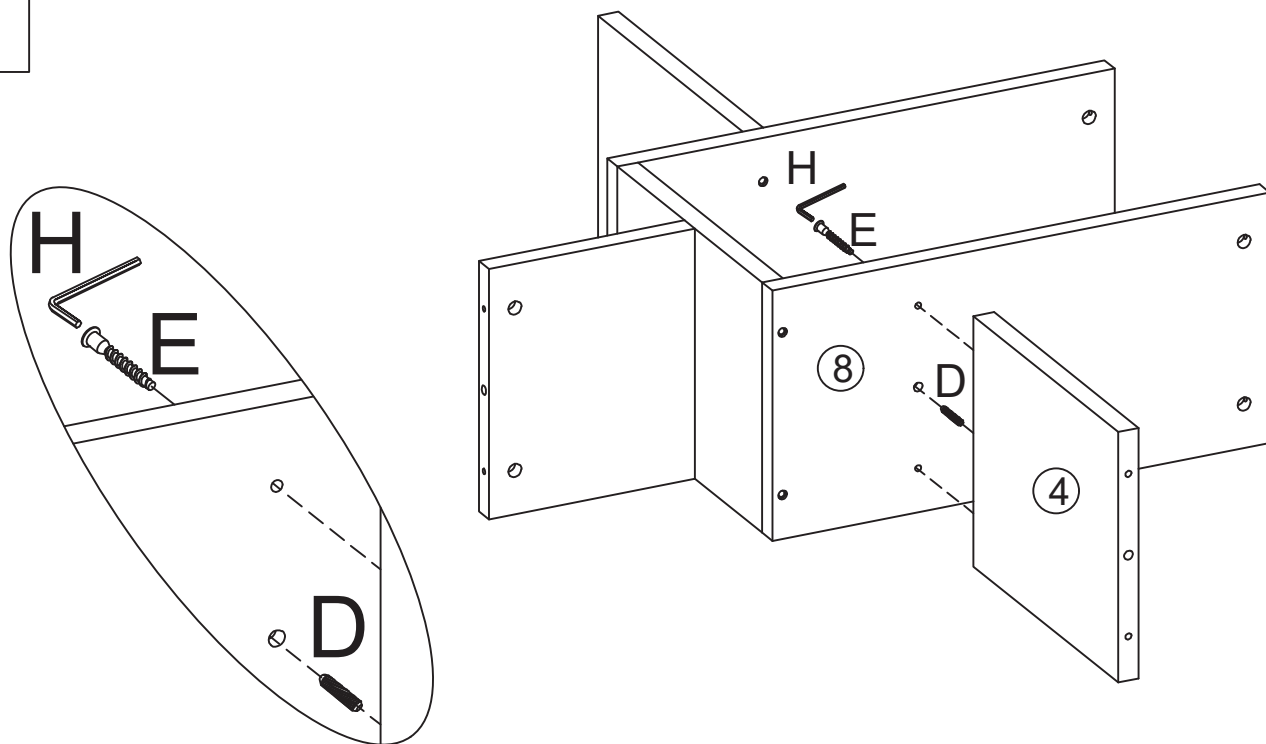


7





D	x1	E	x2	H	x1
					
∅ 10x40mm		∅ 7x35mm		4mm	

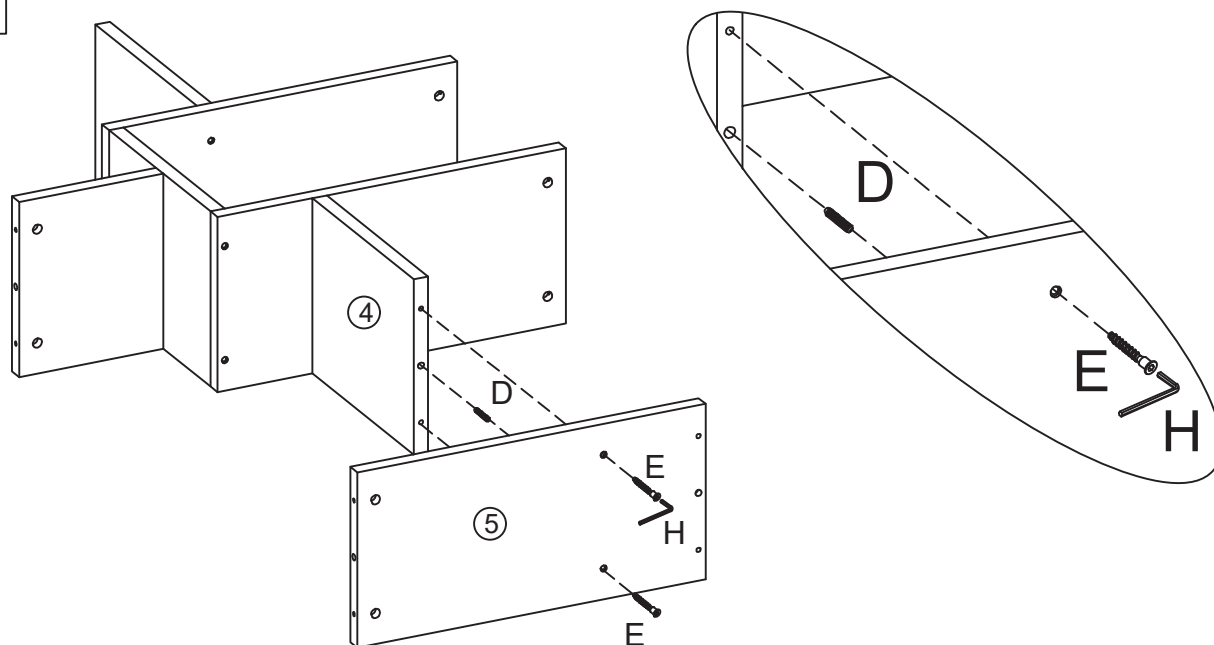


8





D	x1	E	x2	H	x1
					
∅ 10x40mm		∅ 7x35mm		4mm	

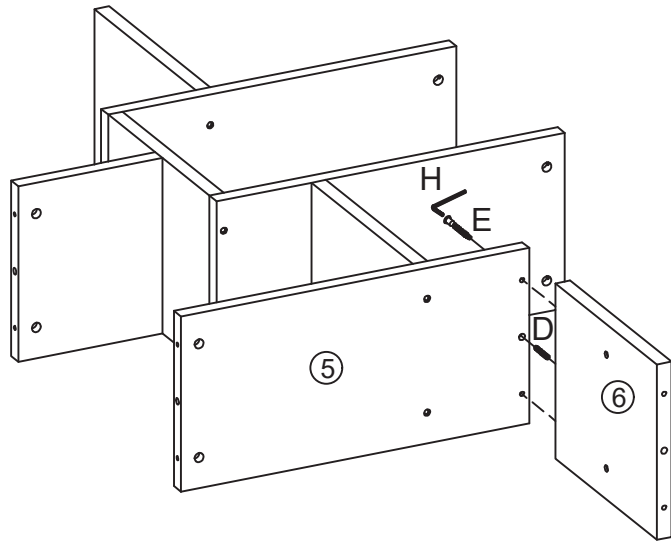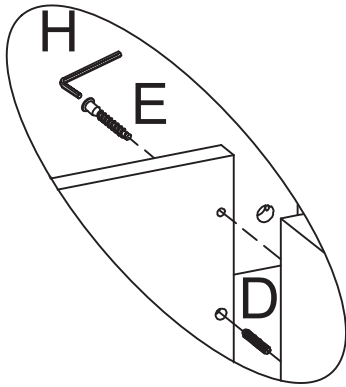


9




D	x1	E	x2	H	x1
					
∅ 10x40mm		∅ 7x35mm		4mm	

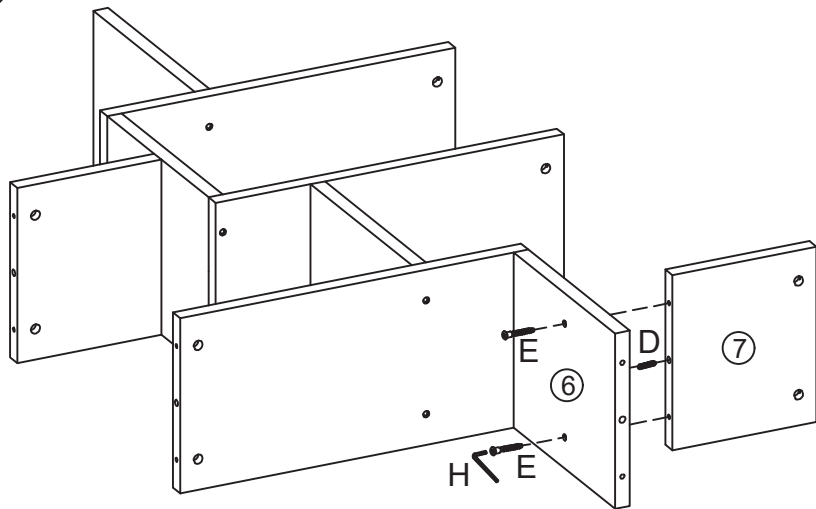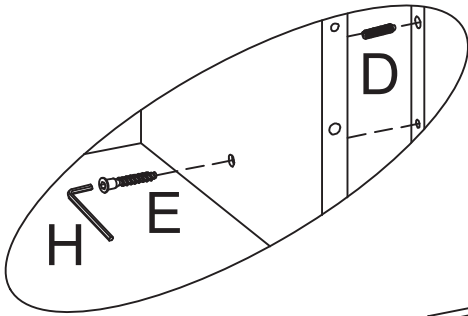


10




D	x1	E	x2	H	x1
					
∅ 10x40mm		∅ 7x35mm		4mm	

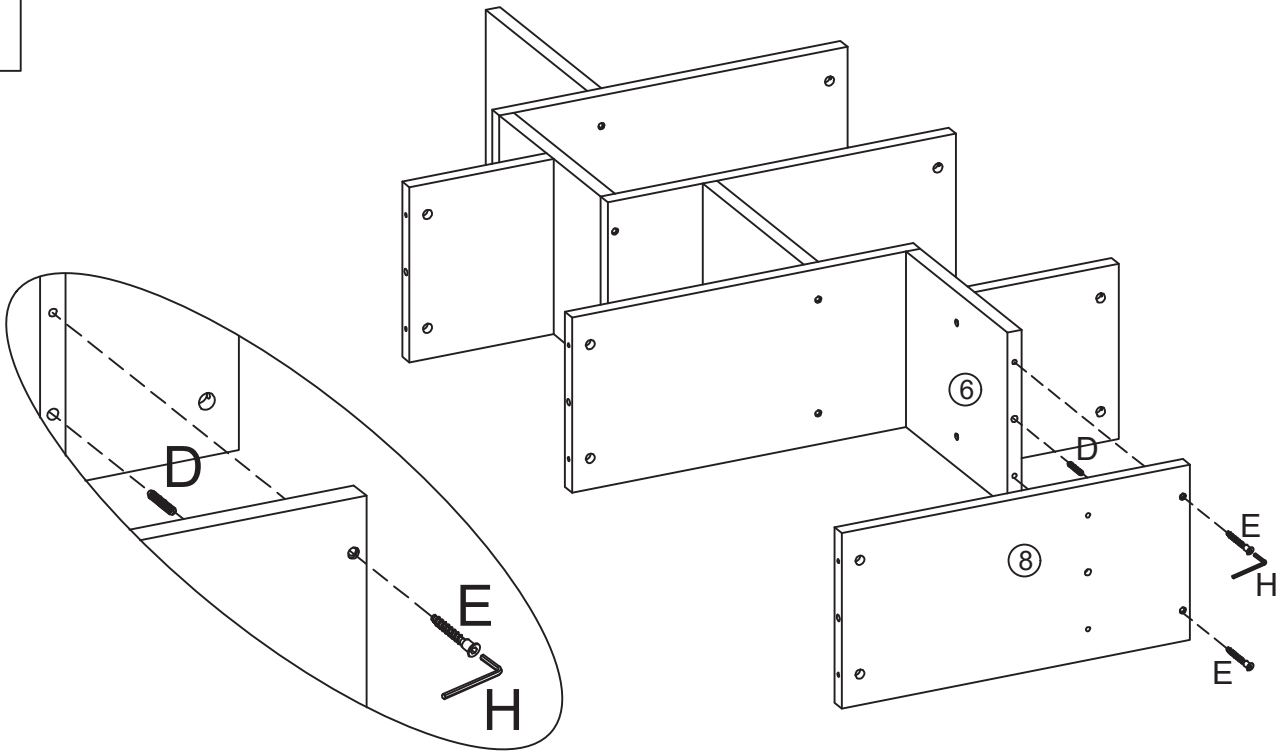


11




D	x1	E	x2	H	x1
					
∅ 10x40mm		∅ 7x35mm		4mm	

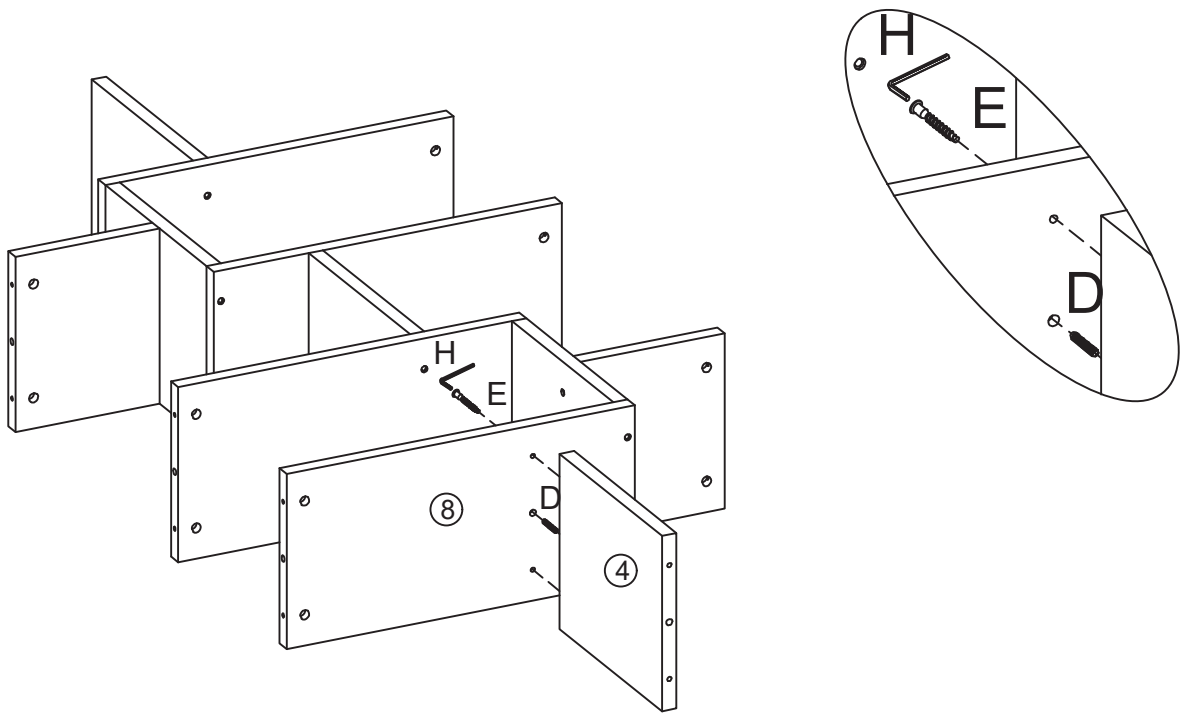

12




D	x1	E	x2	H	x1
					
∅ 10x40mm		∅ 7x35mm		4mm	

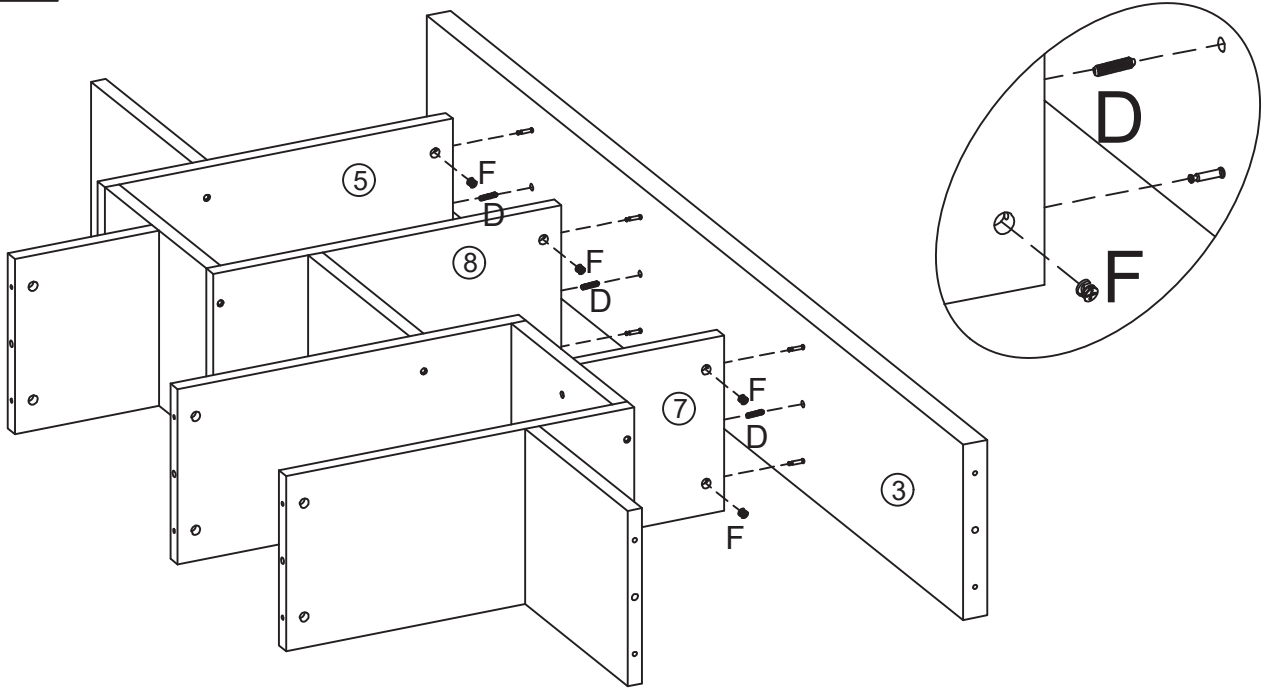

13




D	x3	F	x6
			
∅ 10x40mm		∅ 15x9mm	

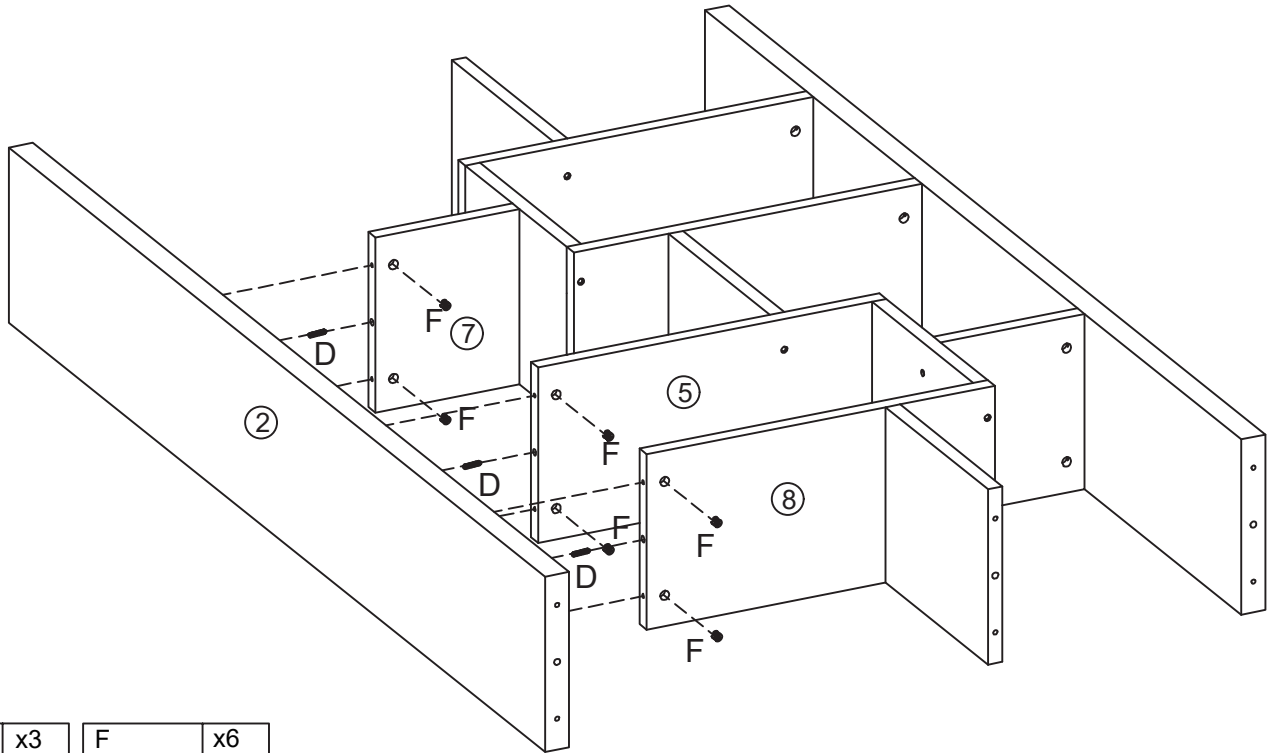14




D	x3	F	x6
			
∅ 10x40mm		∅ 15x9mm	

15

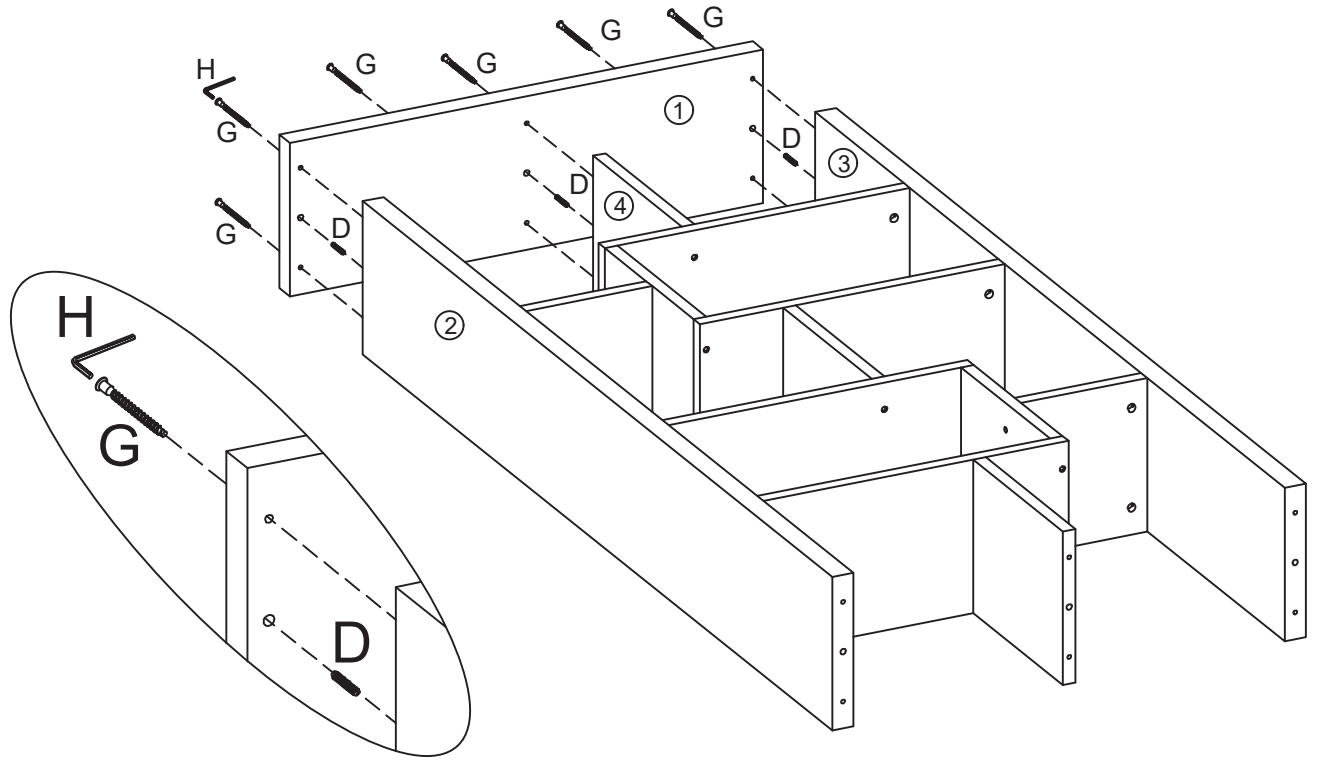


D	x3	G	x6	H	x1
∅ 10x40mm		∅ 7x65mm		4mm	



16

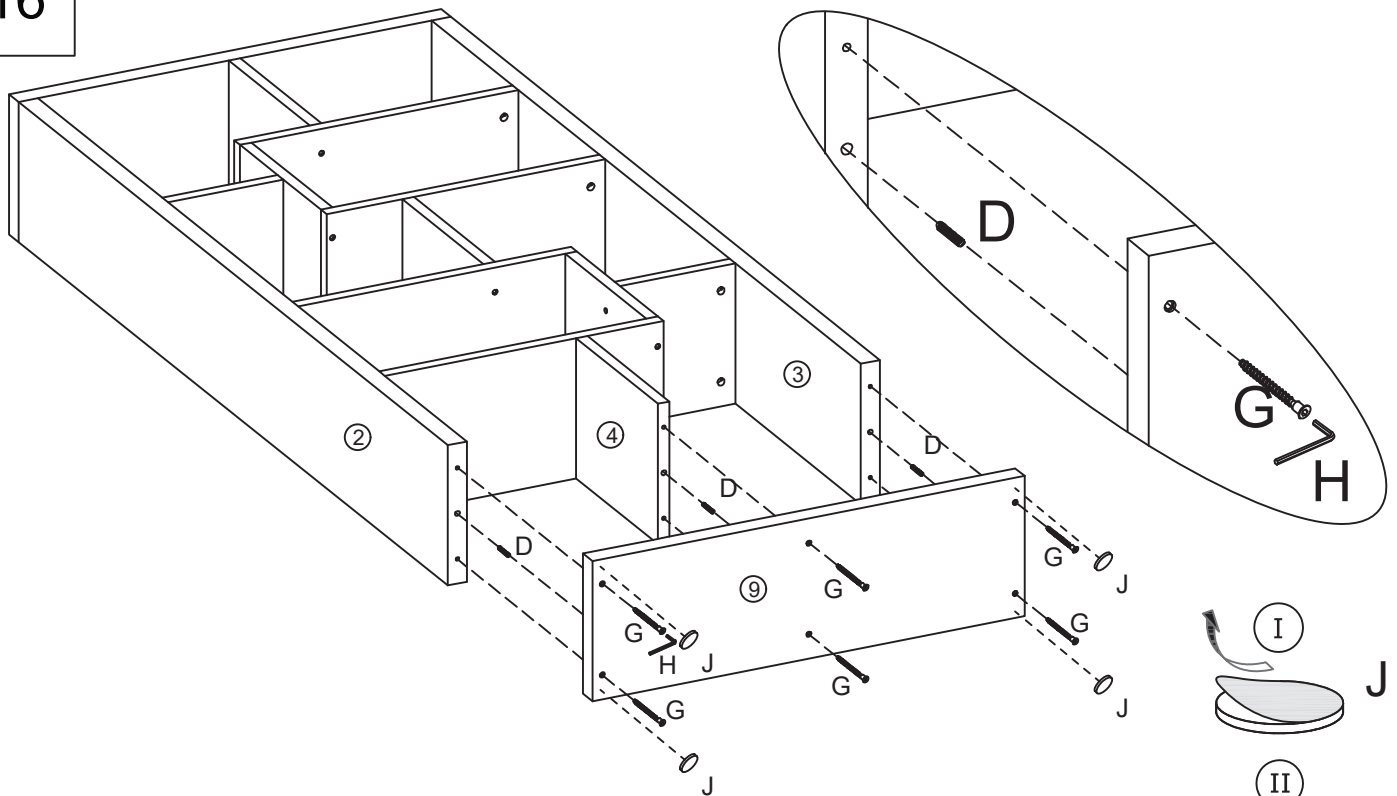

D	x3	G	x6	H	x1	J	x4
∅ 10x40mm		∅ 7x65mm		4mm		Dia25mm	



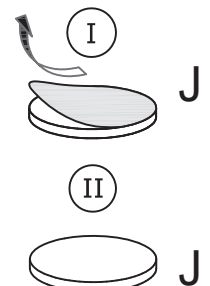


17

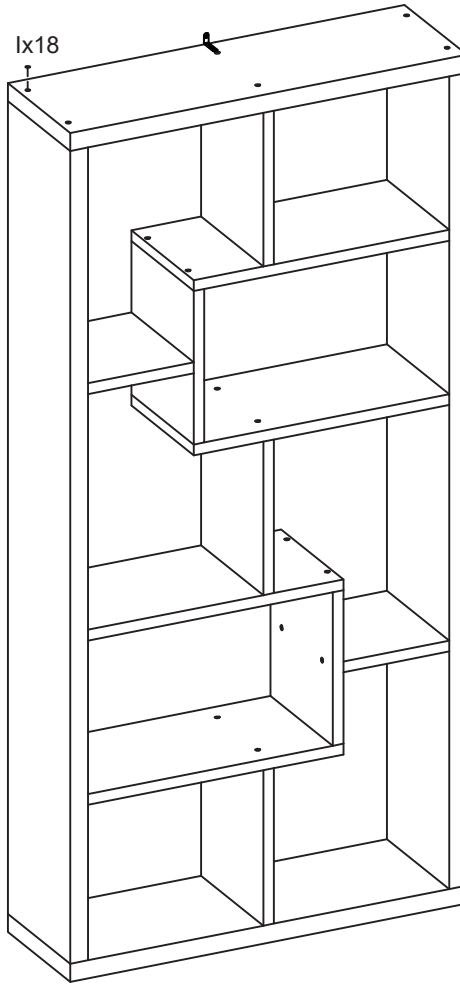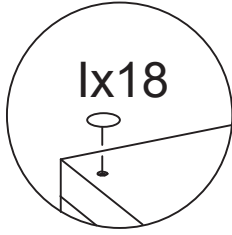

I	x18
Dia20mm	

18

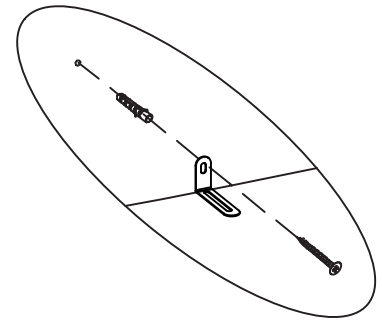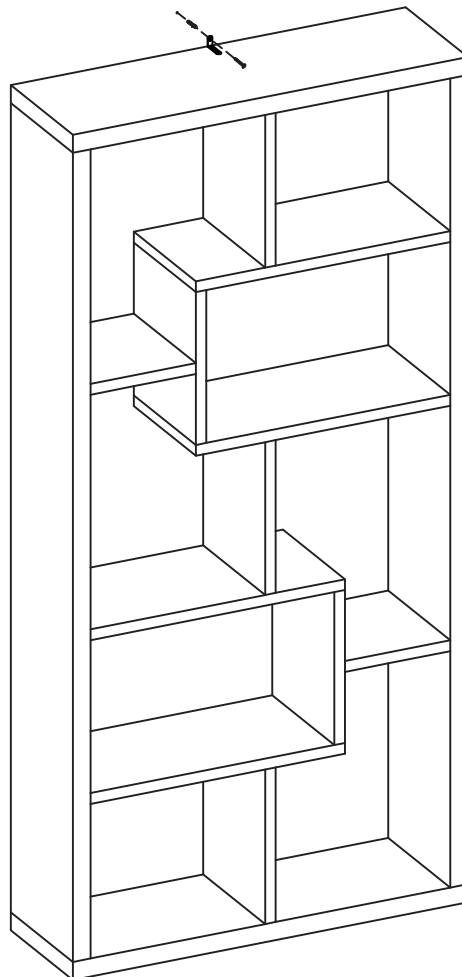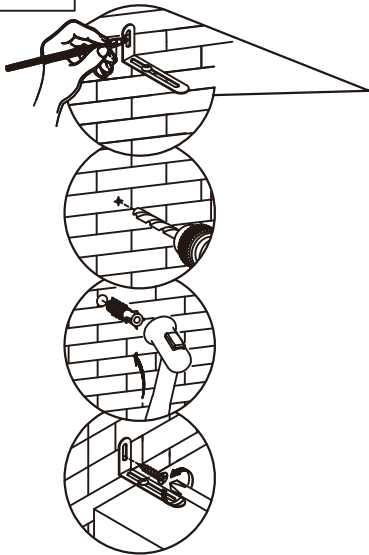

ATTENTION

For your safety it is imperative to fix your furniture to the wall.
 Pour votre sécurité il est impératif de fixer votre meuble au mur.

Please source the right wall mounting hardware according to the nature of wall.
 Merci d'acheter la quincaillerie de montage en fonction du matériau composant le mur.

x1	x1
non inclus	non inclus