



NOTICE DE MONTAGE / ASSEMBLY INSTRUCTIONS

BUT International, 1 avenue Spinoza, 77 184 EMERAINVILLE

REFERENCE NO.	4894223230100	IMITATION CHENE+NOIR/ HONEY OAK+BLACK
NOM DU PRODUIT.	SHAPE BUREAU ANGLE	
EAN:	4894223230100	IMITATION CHENE+NOIR/ HONEY OAK+BLACK

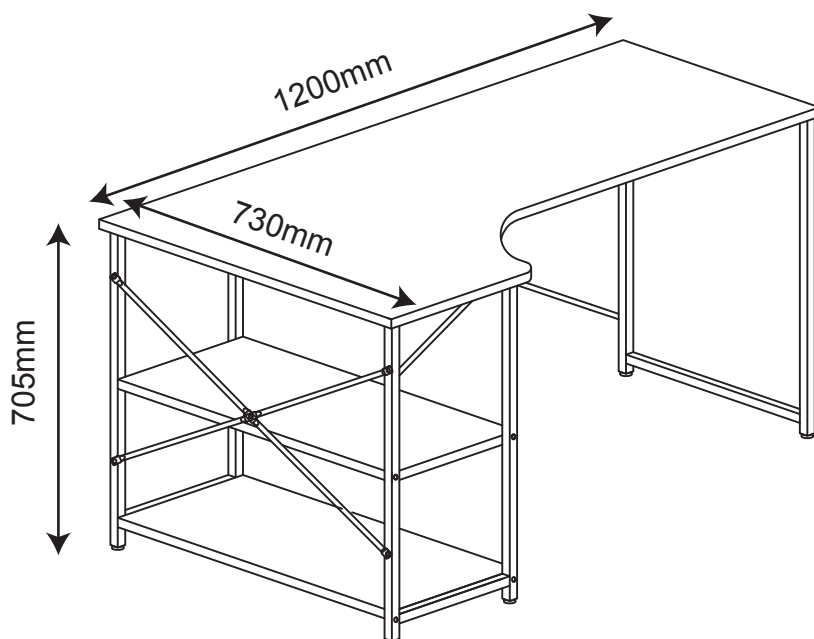

Tous les papiers
se trient et se recyclent




FR

1. Repérez les différentes pièces nécessaires à l'assemblage de votre meuble.
 2. Regroupez et comptez les pièces de quincaillerie.
 3. Munissez-vous de l'outillage nécessaire à l'assemblage de votre meuble.
 4. Aménagez-vous un espace propice à l'assemblage; moquette et couverture peuvent protéger votre meuble des rayures
 5. Procédez au montage sans forcer. Il est recommandé de resserrer les vis au fil de l'utilisation.
 6. Après assemblage de ce produit, il est conseillé d'aérer régulièrement la pièce pendant quelques jours.
- CONSERVEZ VOTRE NOTICE DE MONTAGE. SI UNE PIÈCE VENAIT À MANQUER, L'INFORMATION RELATIVE À CELLE-CI FOURNIE PAR LA NOTICE DE MONTAGE RESTE LE MOYEN LE PLUS EFFICACE DE COMMUNIQUER AVEC VOTRE MAGASIN.



EN

1. Identify the parts which make up your piece of furniture.
 2. Gather the hardware parts and count them.
 3. Have the necessary assembly tools ready.
 4. Organize a space for assembly, wall carpeting or a blanket will protect the furniture against scratches.
 5. Never force the assembling while you put the parts together. You are recommended to tighten the screws after the furniture has been used for some time.
 6. After assembling this product, it is advisable to regularly ventilate the room for a few days.
- KEEP THE ASSEMBLY INSTRUCTION. THE RELEVANT INFORMATION YOU CAN FIND ON IT WILL HELP YOU GET IN TOUCH WITH YOUR STORE IF A PART WAS TO BE MISSING.

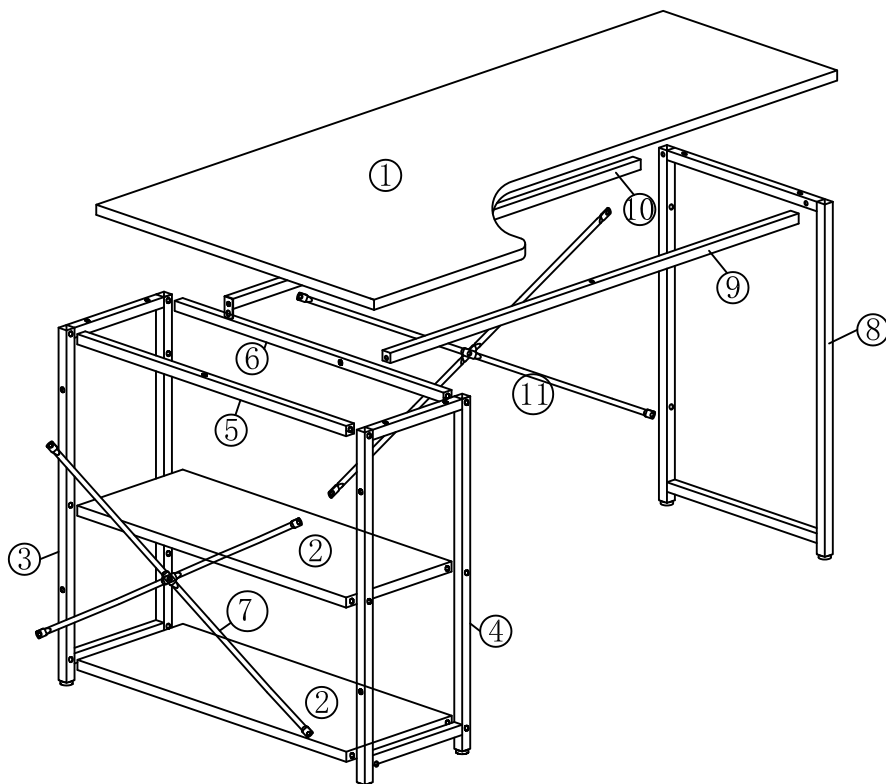

No.	Taille	Qté	Ctn no.
No.	Size	Qty	Ctn no.
No.	Tamaño	Cant	Ctn no.
1	1200x730x15mm	x1	1/1
2	665x249x15mm	x2	1/1
3	690x250x20mm	x1	1/1
4	690x250x20mm	x1	1/1
5	665x20x20mm	x1	1/1

No.	Taille	Qté	Ctn no.
No.	Size	Qty	Ctn no.
No.	Tamaño	Cant	Ctn no.
6	665x20x20mm	x1	1/1
7	806x10mm	x2	1/1
8	690x445x20mm	x1	1/1
9	883x20x20mm	x1	1/1
10	883x20x20mm	x1	1/1

No.	Taille	Qté	Ctn no.
No.	Size	Qty	Ctn no.
No.	Tamaño	Cant	Ctn no.
11	1002x10mm	x2	1/1

Quincailleries/Hardware/Herrajes/ Montageteile- Ctn no./Kto.nr.

1


A	x3	B	x16	C	x7	D	x10	E	x8	F	x6	G	x1
Ø6x15mm		Ø6x30mm		Ø6x40mm		M6		Ø7x50mm		Ø22x20mm		60x25mm	
H	x1												
M4													



TEMPS DE MONTAGE : 30 MINUTE
SET-UP TIME : 30 MINUTE



OUTILLAGE :
TOOLS:



NOMBRE DE PERSONNES : 02
NUMBER OF PERSONS : 02



POUR L'ENTRETIEN, UN CHIFFON DOUX SUFFIRA.
FOR GENERAL CARE, A PIECE OF CLOTH WILL BE ENOUGH

SAV / Spare Part s				EAN:			
(No. / Nr)x(Qté/Qty)							
Ax3		Ex8					
Bx16		Fx6					
Cx7		Gx1					
Dx10		Hx1					




Diagram 1 illustrates the assembly of the main frame. Two long tubes, labeled 11, are crossed at their centers. A nut, labeled D, is threaded onto one of the tubes, and a washer, labeled G, is placed between the tubes at the intersection point. A bracket, labeled H, is attached to the intersection using a screw, labeled A.


A	x2	D	x2	G	x1	H	x1
							
Ø6x15mm		M6		60x25mm		M4	

2




C	x4	E	x8	H	x1
Ø6x40mm		Ø7x50mm		M4	


3

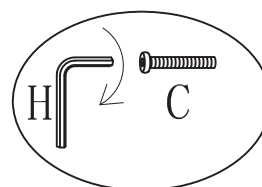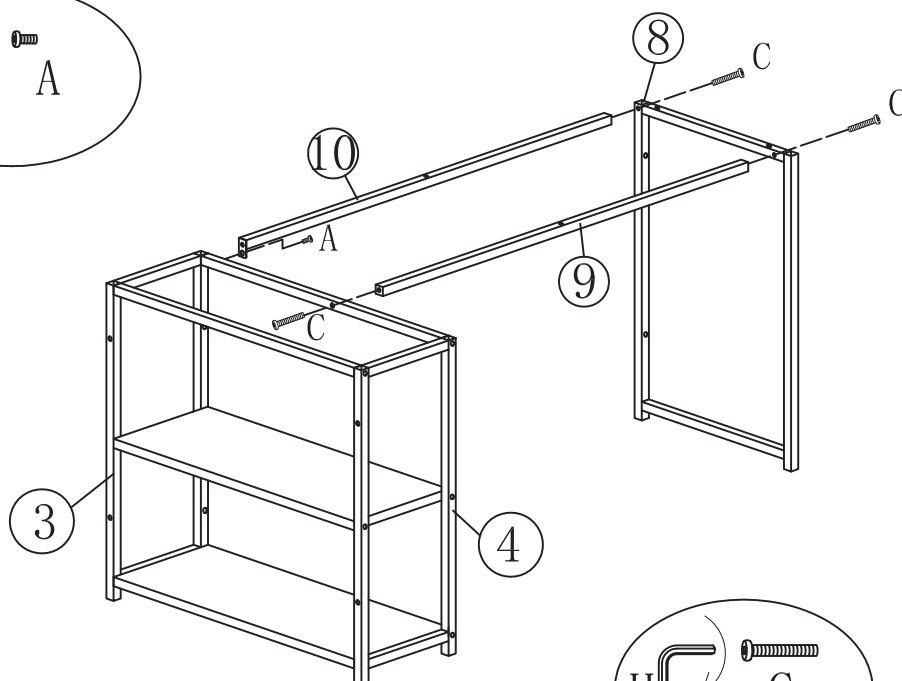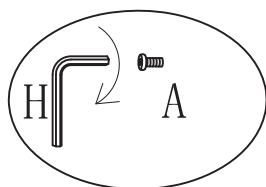


A	x1	C	x3	H	x1
					
Ø6x15mm		Ø6x40mm		M4	


4

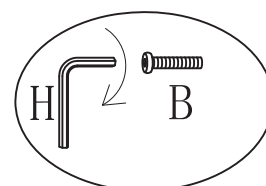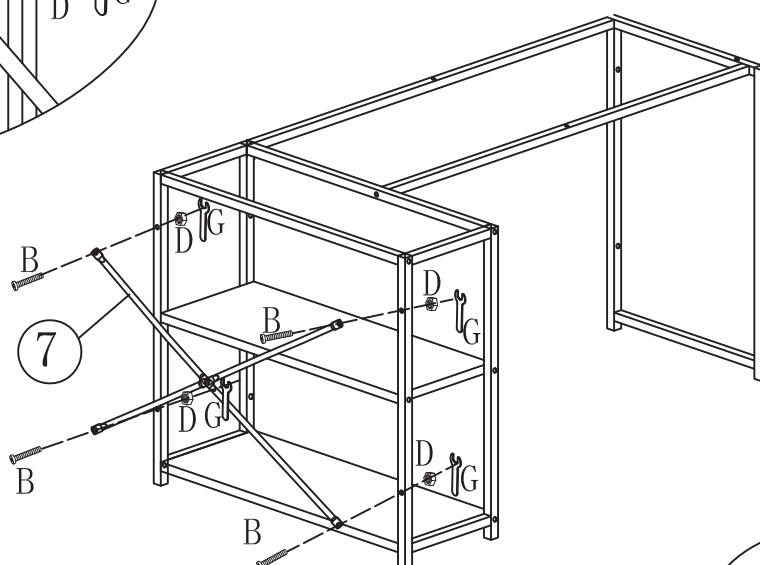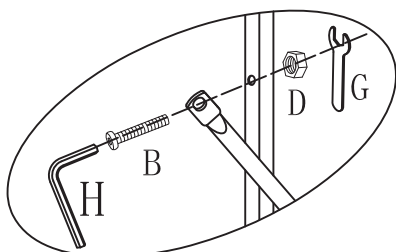


B	x4	D	x4	G	x1	H	x1
							
Ø6x30mm		M6		60x25mm		M4	


5

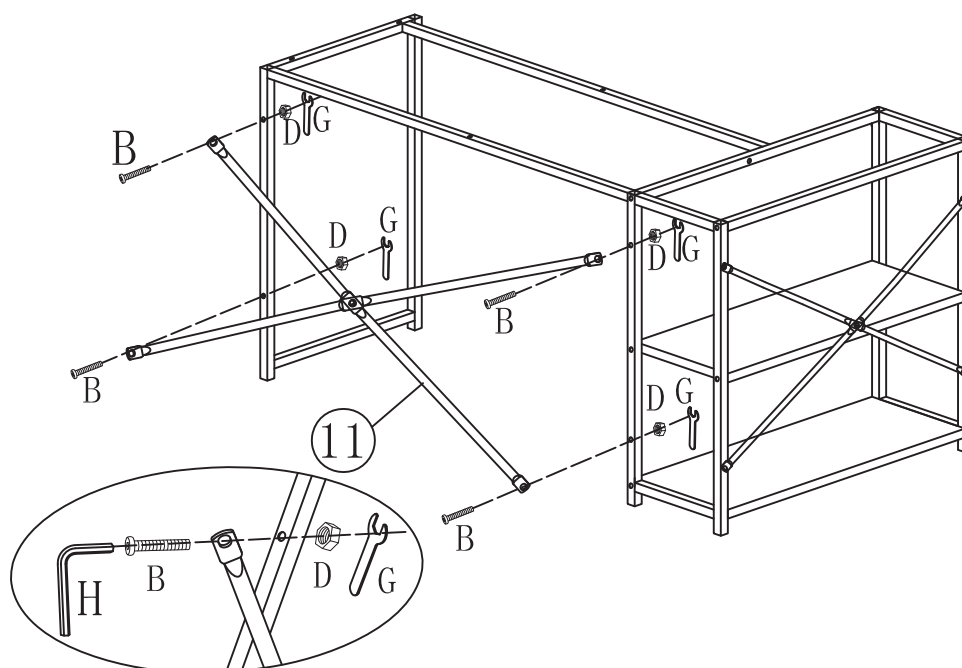



B	x4	D	x4	G	x1	H	x1
							
Ø6x30mm		M6		60x25mm		M4	

6

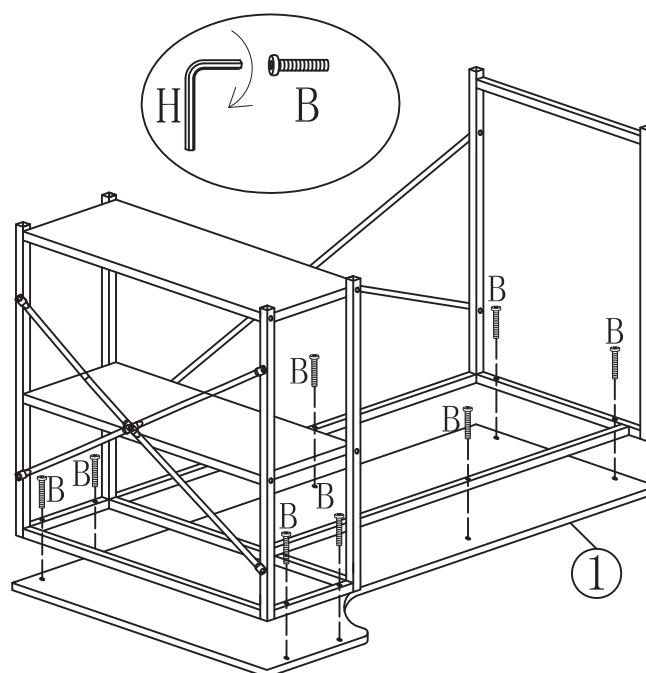

B	x8	H	x1
			
Ø6x30mm		M4	

7

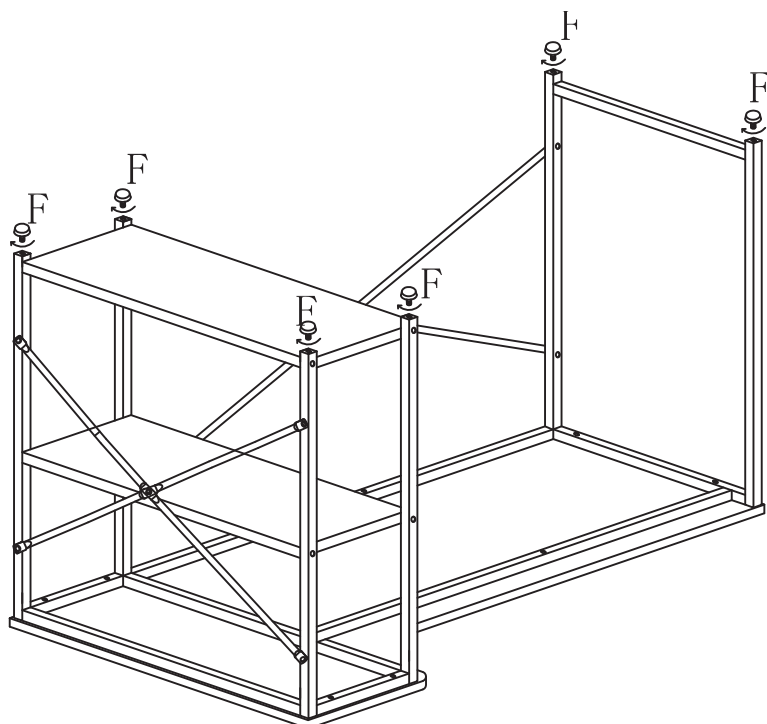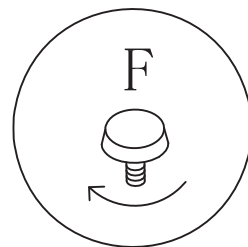

F	x6
$\phi 22 \times 20 \text{ mm}$	

8

